

RUSTIC HALF LOG MANTEL INSTALLATION INSTRUCTIONS

This style mantel support is designed to be installed into an open wall during construction. Other methods of installing onto a finished wall may be used.

- 1) Trim your mantel to the desired finished length if needed.
- 2) Hold your mantel and supports up to the desired finished location and mark the supports to drill 1/4" pilot holes for the lag screws. (Make sure the mantel is level.)
- 3) You may need to cut excess material off the mantel supports.
- 4) Screw the 2 coped log supports to your wall studs (with the 4 lag screws provided) Fig. 1
- 5) Secure the mantel to the coped supports as needed with the 4 screws provided.

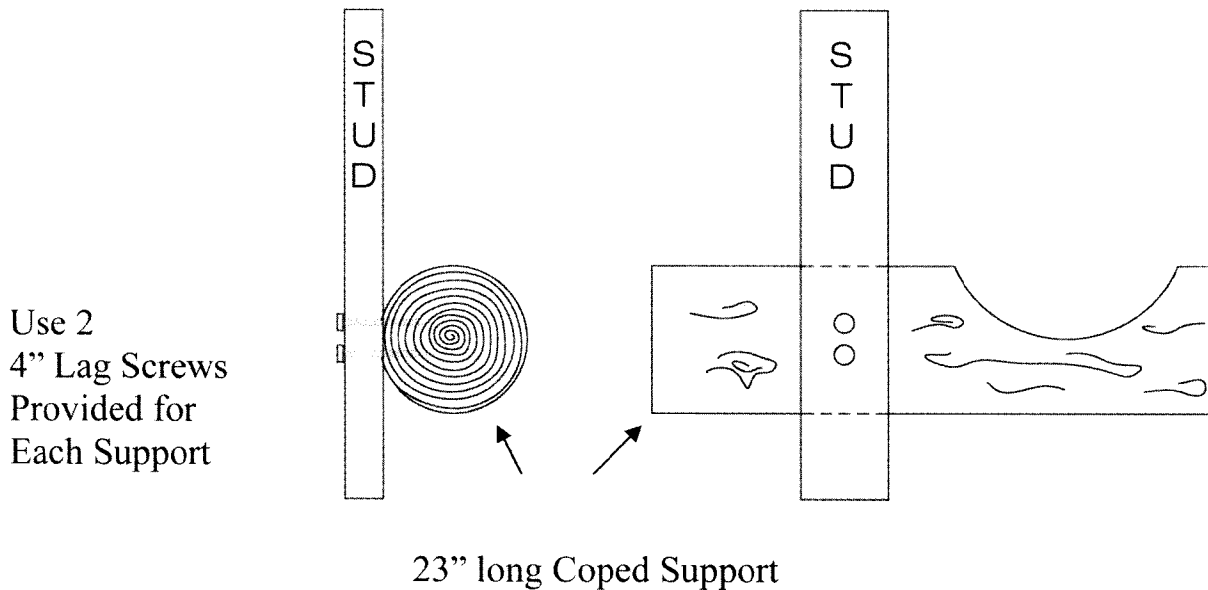


Fig. 1
Front View

Fig. 1
Side View